

ARTECK®

## User Manual

### Arteck HW192 Wireless Keyboard



RoHS CE FCC IC: 29101-CA 204-620131  
2 Years Warranty Claim Email: support@arteck.com

Version: US

#### Welcome

Thank you for choosing this Arteck HW192 wireless keyboard. To ensure optimum performance and safety, please read these instructions carefully before operating this product. It is strongly recommended you keep the manual for future reference.

#### Product Specifications

Wireless Specification	2.4G USB Wireless
Operating Range	Up to 10 Meters
Modulating System	GFSK
Operating Voltage	3.0-4.2V
Operating Current	<2mA
Standby Current	0.3-0.5mA
Sleeping Current	<10uA
Charging Current	>200uA
Standby Time	>1000 days
Charging Time	>2 hours
Input Voltage	5V
Uninterrupted Working Time	>250 hours
Lithium Battery Style	Rechargeable
Lithium Battery Specification	3.8*20*35mm
Key Strength	50-80g
Key Life	3 million strokes
Operating Temperature	-10 - 50°C

#### Package Contents:

Arteck HW192 Wireless Keyboard \*1  
USB nano 2.4G receiver  
Micro USB charging cable \*1  
User manual \*1

1

#### Getting Started Guide

##### 1. Product Overview



- Keyboard ON/OFF Slide Switch.
- Power Indicator: Lights up green for when it's turned on. When you press the power meter key, the power indicator will flash for the power meter.
- CAPS Lock Indicator: Green light on when CAPS on.
- Number Lock Indicator: Green light on when Number lock on.
- Fn Lock Indicator: Blue light on when Fn lock on.
- Charging Indicator: Red light will turn on when the keyboard is charging and turns green once fully charged.
- Micro Charging Port: Used for charging the keyboard.

#### Charge the Battery

Turn on the Wireless keyboard.  
The power indicator light will illuminate green.  
If the power indicator light keep blinking, it means the battery is low, you need to charge the keyboard with below steps:  
1. Plug the Micro USB charging cable into the keyboard.  
2. Plug the USB plug on a computer or USB power adaptor.  
3. The charging indicator will be on red. Charge for 3-5 hours, or until the charging indicator become green.

2

#### 2. Function Keys

	Mute		Volume down		Volume up
	Previous Track		Play / Pause		Next Track
	Brightness down		Brightness up		Media Player
	Switch Windows		Mail		Web Browser
	Fn Lock		Print Screen		Calculator
	My Computer		Battery Meter		Search

#### Fn Lock Key

The default function of the F1-F12 will be F1-F12 function. If you press the , the Fn indicator will be on. Then the function will change to the above table functions.

#### Battery Meter

Press the battery meter key, the power indicator will flash. Flashing 4 times means the battery is full charged, flashing 3 times means the power is around 75% remaining, flashing 2 times means the power is around 50% remaining, flashing 1 time means the power is around 25% remaining.

#### Steps of Pairing the Keyboard with Your Computer

Step 1: Turn on the OFF/ON switch of the keyboard.  
Step 2: Insert the USB receiver to the port of your computer. It will pair to the keyboard automatically. You are able to type the keyboard right now.

Notice: If you are not able to connect the keyboard to your computer, please kindly change to another USB port and make sure that the USB receiver plug to the end of the USB port.  
If above doesn't solve, please kindly contact with support@arteck.com for assistance. We will solve your issue with 100% satisfactory solution.

#### Troubleshooting

- Make sure the keyboard is on (slide switch in "ON" position).
- Make sure the keyboard is in operating distance (within 10 meters).
- Ensure the battery storage has power.
- Make sure the USB receiver is plugged to the end of USB port.

3

#### Caution:

- When not in use for a prolonged period, it is recommended that you turn off the keyboard to lengthen battery life.
- When the power status light flash, it is recommended that charging the keyboard not less than 2 hours.

#### Energy-saving Sleep Mode

Keyboard's long life battery lasts for several months of normal use. The keyboard will go into sleep mode if left on and not being used; press any key and wait a second or two to bring it out of sleep mode.

#### Safety Caution

- Keep the item away from sharp objects.
- Do not place heavy object on the keyboard.
- Away from microwave items.
- Do not force or distorted the keyboard.
- Keep away from oil, chemical or other organic liquid.

#### Disposal of Waste Batteries

Insert screwdriver between plastic top and metal case at keyboard top or bottom and Pry up plastic top and remove it completely. This action destroys keyboard separate battery from circuit board, it is your responsible to hand this over to an applicable collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous in batteries and electrical and electronic equipment.

#### IC Caution

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:  
(1) This device may not cause interference.  
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:  
(1) l'appareil ne doit pas produire de brouillage, et  
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### Warranty

Our company provides customers with a warranty of 24 months from the date of purchase.

#### Contact Us

For any inquires or comments concerning our products, please send an email to support@arteck.com, and we will respond to you as soon as possible. If there is any quality-related issue with the product, you may request a replacement or refund by submitting a request to support@arteck.com.

4

ARTECK®

## ユーザーマニュアル

### Arteck HW192 ワイヤレスキーボード



RoHS CE FCC IC: 29101-CA 204-620131  
2年間保証対応Eメール: support@arteck.com

#### ようこそ

Arteck HW192ワイヤレスキーボードをお選びいただきありがとうございます。本商品を作動させる前に、最高のパフォーマンスを発揮させ安全にお使いいただくために説明文をお読みください。このマニュアルは手元に保管していただくことを強く推奨します。

#### 商品の仕様

ワイヤレス方式	2.4G USBワイヤレス
通信範囲	最大10M
変調システム	GFSK
稼働電圧	3.0-4.2V
稼働電流	<2mA
待機電流	0.3-0.5mA
スリープ電流	<10uA
充電電流	>200uA
待機時間	>1000 日
充電時間	>2時間
充電電圧	5V
連続使用可能時間	>250時間
リチウム電池タイプ	充電式
リチウム電池仕様	3.8*20*35mm
キー圧力	50-80g
キー寿命	ストローク300万回
移動温度	-10 - 50°C


#### パッケージ内容:

Arteck HW192 ワイヤレスキーボード x 1  
USB2.4Gレシーバー x 1  
マイクロUSB充電ケーブル x 1  
ユーザーマニュアル x 1

5

#### ワイヤレスキーボードの使い方

##### 1. ワイヤレスキーボードについて

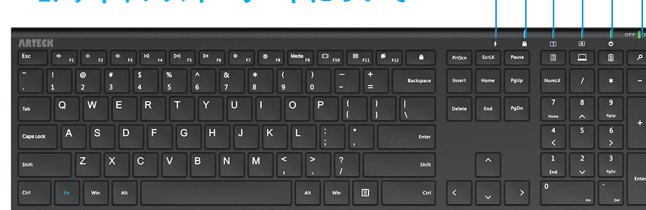

- キーボード電源スイッチOn/Off.
- パワーOn/Off表示灯:電源スイッチをオンにした後、表示灯が緑色と点灯します。
- CAPSロック表示灯:「Caps Lock」キーを押すと、表示灯が緑色と点灯します。Winシステムで日本語入力の場合、定番の日本語と英字入力の切り替えることとなりますので、点灯しないうです。Shiftキーを押しながら、「Caps Lock」キーを押すと点灯になり、キーボードで入力する英文字の大文字・小文字を切り替えることができます。
- ナムロック表示灯: NumLK」キーを押すと、表示灯が緑色と点灯します。
- Fnロックキー表示灯:「Fnロック」キーを押すと、表示灯が青色と点灯します。
- バッテリー表示灯:充電している時、バッテリー表示灯が赤色と点灯します。満充電にした後、バッテリー表示灯は緑色になります。
- マイクロ充電ポート: 充電時に使用します。

#### 電池の充電

キーボードの電源スイッチをオンにして、パワー表示灯は緑色と点灯します。この時、キーボードは電源オンの状態です。パワー表示灯が点滅している場合、バッテリー残量がなくなったことを示します。バッテリーの充電が必要です。  
1. 付属のUSBケーブルをパソコンのUSBコネクタまたはACアダプターに接続します。  
2. USBケーブルのもう一方を本製品のMicro充電コネクタに差し込みます。  
3. 充電表示灯が緑色になるまでに充電してください。

6

#### 2. ファンクションキー

	ミュート		音量を小さくする		音量を大きくする
	前のトラックへ		再生一時停止		次のトラックへ
	暗くなる		明るくなる		メディアプレーヤー
	ページを切り替え		メール		ウェブブラウザ
	Fnロック		表示している画面を画像としてクリップボードに保存		電卓
	マイコンピュータ		バッテリーメーター		検索

#### Fn+ファンクションキーに関するご注意

F1-F12キーを押すとF1-F12のデフォルトファンクションになります。  
Fn ロックキーを押せば、Fn表示灯が点灯します。この時、F1-F12を押すと、キーボタンの上の方に示すファンクションになります。

#### バッテリーメーター

バッテリーメーターのキーを押すと、電源表示灯が点滅になります。4回を点滅するのはバッテリーが満充電ということです。3回を点滅するのはバッテリーの残量が75%になります。2回を点滅するのはバッテリーの残量が50%になります。1回を点滅するのはバッテリーの残量が25%になります。

#### キーボードとコンピューターのペアリングの手順

ステップ1: キーボードの電源スイッチをオンします。  
ステップ2: パソコンのUSBポートにUSBレシーバーを接続します。キーボードと自動的にペアリングされます。キーボードでご入力できます。

ステップ3: もし記号の入力が印刷と違う場合、「例:shift+7→「\*」が入力、shift+8→「(」が入力されます。」下記によってパソコンのキーボードレイアウトを設定ください。PCの設定>時刻と言語>言語>日本語>日本語ををクリックして>オプション>ハードウェアキーボードレイアウト>レイアウトを変更する>ハードウェアキーボードレイアウトの変更>英語キーボード(101/102キー)を選択>今すぐ再起動する>起動した後設定完成。

7

ご注意: キーボードがパソコンとペアリングできないかまたはステップ3のレイアウトが設定できない場合は、お気軽に support@arteck.com ご連絡くださいますようお願い申し上げます。弊店はぜひご満足いただけるアフターサービスをご提供いたします。

#### お使用中のご注意

- 長時間にご使用しない場合があれば、バッテリーの寿命を延ばすために電源スイッチをオフしてください。
- バッテリー表示灯が点滅している場合は、2時間以上キーボードを充電してください。

#### 電力を低減するスリープモードについて

本製品は通常の使用においては、バッテリー電量が数月間に使用できます。長時間キーを押していないとスリープモードに入ります。

どれかキーを押して数秒後、スリープモードを解除します。

#### トラブルシューティング

- キーボードをオンになっていることを確認してください(スライドスイッチがONの位置にある)。
- キーボードが10メートル範囲内使用されていることを確認してください。
- バッテリーの残量が空になっていないかを確認してください。
- USBレシーバーをパソコンのUSBポートにちゃんと接続します。

#### 保証

購入日から24ヶ月間保証。

#### お問い合わせ

当社製品に関するご質問やご意見につきましては、support@arteck.comに宛ててメールを送信していただくと、迅速に返信を差し上げます。製品の品質に関して問題があれば、support@arteck.comに交換または返金要求を送信してください。

8